
KUBE 7192 TwinSide Dual Pyroelectric Sensor

for wide angle PIR motion detectors, including lighting and intrusion alarm detectors.

Features:

- 2-in-1, radiation can enter the sensor from both sides, replaces two separate sensors
- Ideal for wide angle (180°) PIR motion detectors, when used with TR241 mirror
- Two physically separated sensing elements (series opposed dual)
- Flat, space saving sealed metal housing
- Includes JFET and two optical filter windows
- Broad optical bandwidth (5 to 25 µm) for maximum signal, but still good white light immunity

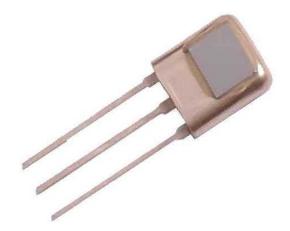

- Excellent long term stability. Proven reliability under high humidity conditions
- Radiation falling on oppositely polarized elements simultaneously is cancelled
- Low noise / low false alarm rate
- RoHS conform


Characteristics	Value	Unit	Test Conditions
Element size (typ)	0.7 × 2.1	Mm	nominal, each
Element spacing (typ)	0.6	Mm	nominal
Optical wavelength	5 25	μm	7 14 µm ≥70%
Responsivity (typ)	2700	V/W	7 14 µm @ 1Hz
Common mode rejection ratio (typ)	15:1 min 1:7		7 14 µm @ 1Hz
Noise (typ)	5.1	μV / √Hz	1.0 Hz rms, 1Hz
Operating voltage	2.2 10	V_{dc}	V _D to Ground
Offset voltage	0.3 1.2	V_{dc}	$R_S = 100 \text{ k}\Omega$
Operating drain current	0.2 10	μA	(recommended range)
Thermal breakpoint f _⊤ (typ)	0.2	Hz	
Electrical breakpoint f _e (typ)	0.05	Hz	
Field of view (horizontal)	121 / 128	degrees	from center between sensing
Field of view (vertical)	104 / 113	degrees	elements
Window Filter size	4.7 × 3.7	mm	both windows
Operating temperature	-20 + 50	°C	-30+70° with precautions
Storage temperature	-30 +70	°C	change < 50°C / minute

Recommendations:


- A source resistor is needed to set the drain current and consequently the operating parameters of the internal JFET. A 47 kΩ or greater value resistor is recommended. For low power applications (0.2 μA), a source resistor of 3.3 MΩ can be used.
- The supply voltage must be stabilized (free of voltage steps and low frequency variations). This is best accomplished with a regulator or voltage reference chip, and RC filtering.
- Careful circuit board layout, short connections and shielding may be required for adequate RF immunity.
- For best quality, use well controlled hand soldering for pyroelectric sensors.
 Wave soldering is not recommended. Avoid mechanical stresses on the leads.
- If needed, clean window with alcohol to remove flux and fingerprints.
- Do not apply varnish, lacquer, silicone or other transparent coatings on window, as these
 materials will not transmit IR.

June 13 1 / 2

Internal circuit and pinout:

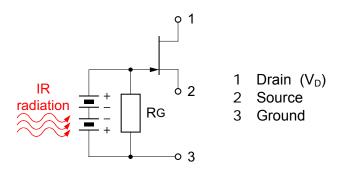

Drawing and Field of View:

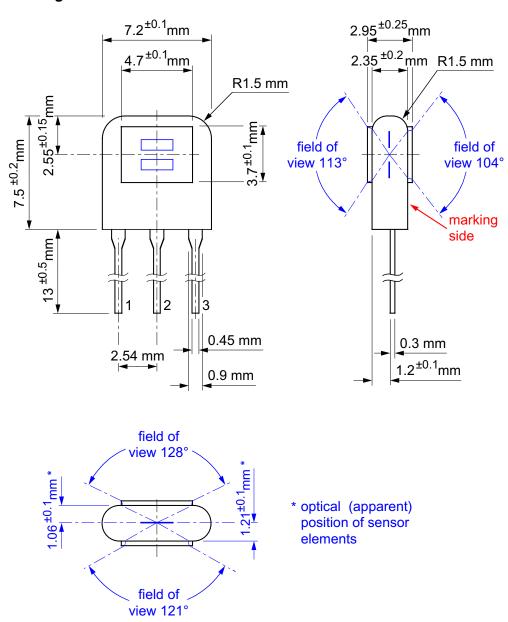

June 13 2 / 2